




PRECISION

# OPERATING INSTRUCTIONS CHRONOGRAPH


Movement Cal. 5030.D & 5021.D

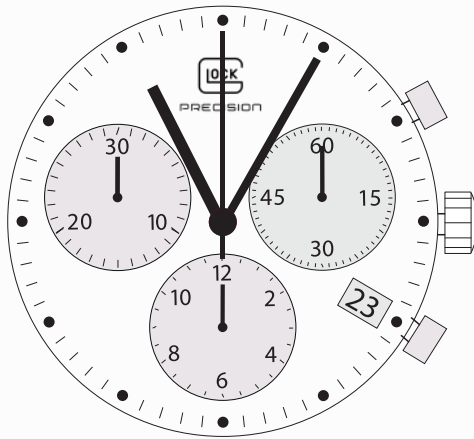


# DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

## Display Elements

## Control Buttons

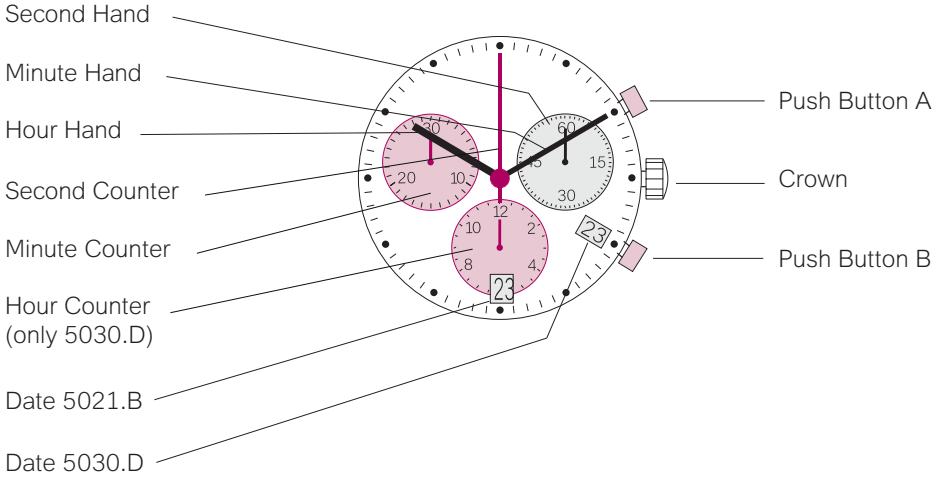



## SETTING THE TIME

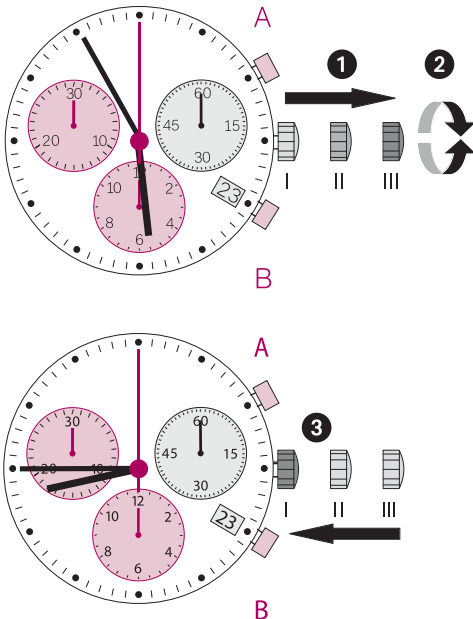

- 1** \* Pull out the crown to position III (the watch stops).
- 2** Turn the crown until you reach the correct time, **8:45**.
- 3** \* Push the crown back into position I.

**Please note:** \* In order to set the time to the exact second, **1** must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, **3** must be pushed back into position I at the exact second.

## SETTING THE DATE (QUICK MODE)

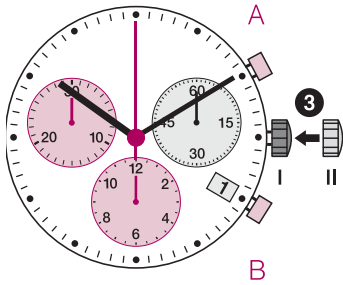
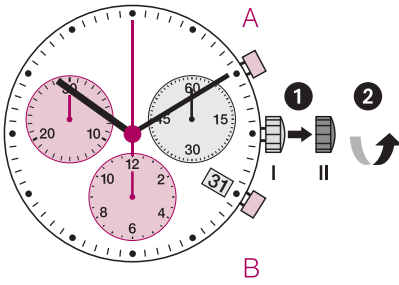


### Example:

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date **1** appears.
- 3 Push the crown back into position I.


**Please note:** During the date-changing phase between approx. 9 PM and midnight, the date must be set to the date of the following day.

## SETTING THE DATE/TIME FOLLOWING A BATTERY CHANGE

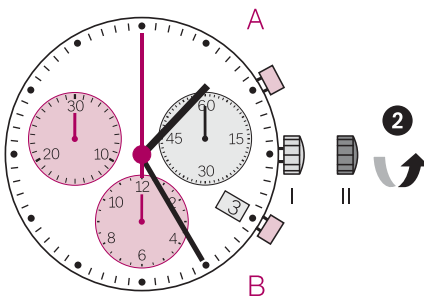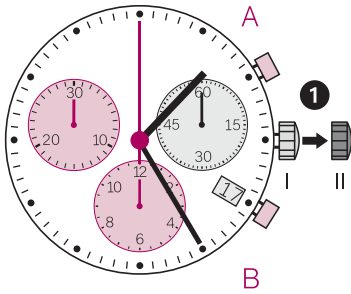

### Example:

- Date/time on the watch: **17** /1:25 AM
  - Present date/time: **4** /8:30 PM
- 1 Pull out the crown to position II (the watch continues to run).
  - 2 Turn the crown until yesterday's date appears **3**.

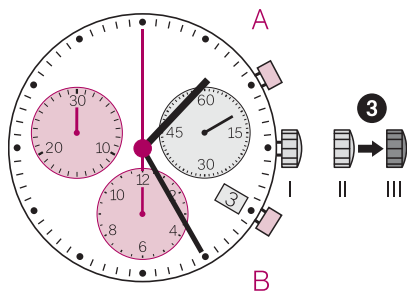


3 \* Pull out the crown to position III (the watch stops).

4 Turn the crown until the correct date **4** appears.

5 \*\* Continue to turn the crown until the correct time of 8:30 PM appears.


6 Push the crown back into position I.

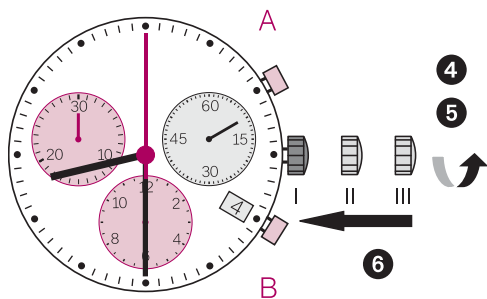

**Please note:** \* To set your watch to the exact second, please refer to the chapter entitled «SETTING THE TIME».

\*\* Please observe the AM/PM clock rhythm.

## BASIC FUNCTION (START/STOP/RESET)

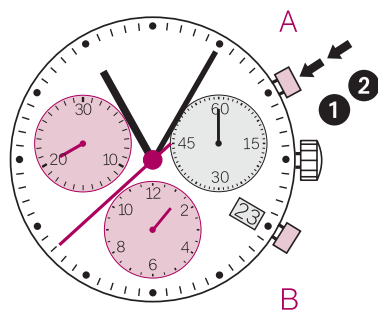


**Example:**


1 **Start:** Press push button **A**.

2 **Stop:** To stop the timing, press push button **A** once more and read the chronograph hands: **1 h/20 min/38 sec**.

3 **Zero positioning:** Press push button **B**. (The chronograph hands will be reset to their zero positions.)

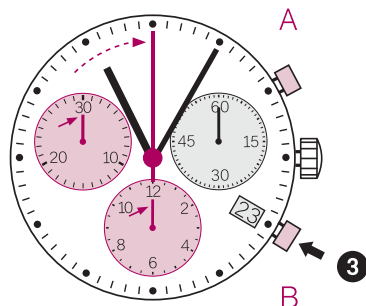

# ACCUMULATED TIMING

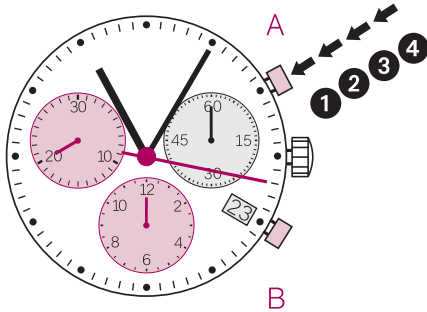


## Example:

- 1 **Start:** (start timing)
- 2 **Stop:** (e.g., 15 min 5 sec following 1)
- 3 **Restart:** (timing is resumed)
- 4 **\*Stop:** (e.g., 5 min 12 sec following 3)  
= 20 min 17 sec


(The accumulated measured time is shown.)

- 5 **Reset:** The chronograph hands are returned to their zero positions.

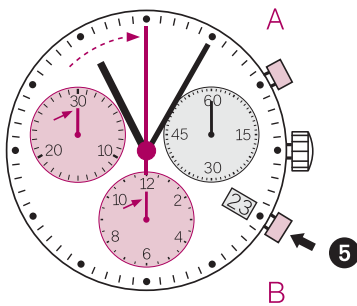


**Please note:** \* Following 4, the accumulation of the timing can be continued by pressing **push button A** (Restart/Stop, Restart/Stop, ...).

# INTERMEDIATE OR INTERVAL TIMING

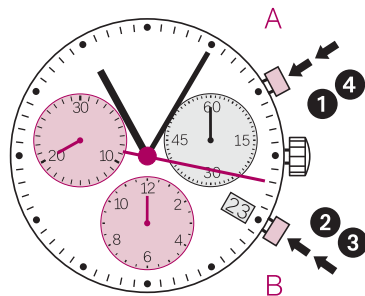

## Example:

- 1 **Start:** (start timing)
- 2 **Display interval:** e.g., 20 min 17sec  
(timing continues in the background)
- 3 **\* Making up the measured time:**  
(The chronograph hands are quickly advanced to the ongoing measured time.)
- 4 **Stop:** (Final time is displayed)
- 5 **Reset:** The chronograph hands are returned to their zero position.

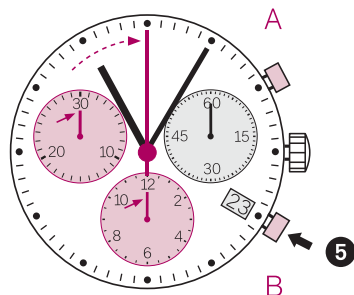



**Please note:** \*Following 3, further intervals or intermediates can be displayed by pressing **push button B** (display interval/make up measured time, ...).

# ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

## Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g., following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- 2 Keep push buttons **A** and **B** depressed **simultaneously** for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

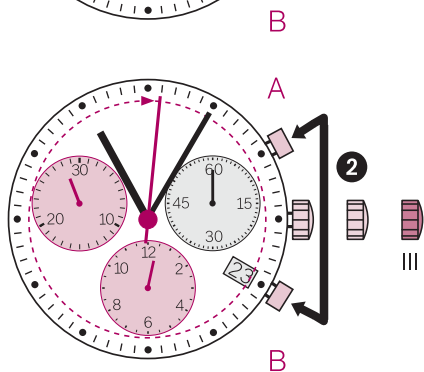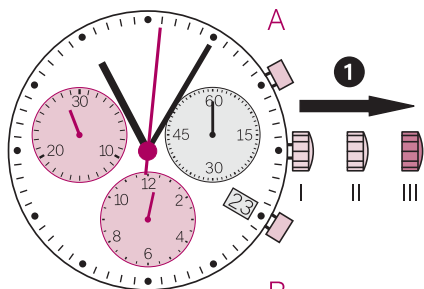

### Adjusting the second counter hand

Single step ↙ A **1 x short**

Continuous ↙ A **long**



### Adjusting the next hand B ↙

### Adjusting the hour counter hand at 5030.D (position 6h)

Single step ↙ A **1 x short**

Continuous ↙ A **long**




### Adjusting the next hand B ↙

### Adjusting the minute counter hand (position 9h)

Single step ↙ A **1 x short**

Continuous ↙ A **long**

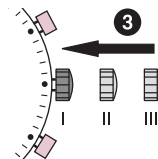

### 3 Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).